


Golden Fuel Systems Triple Valve Plumbing Diagram



NOTE: Solenoid coils can be turned by loosening the nut if necessary to make them fit your installation.

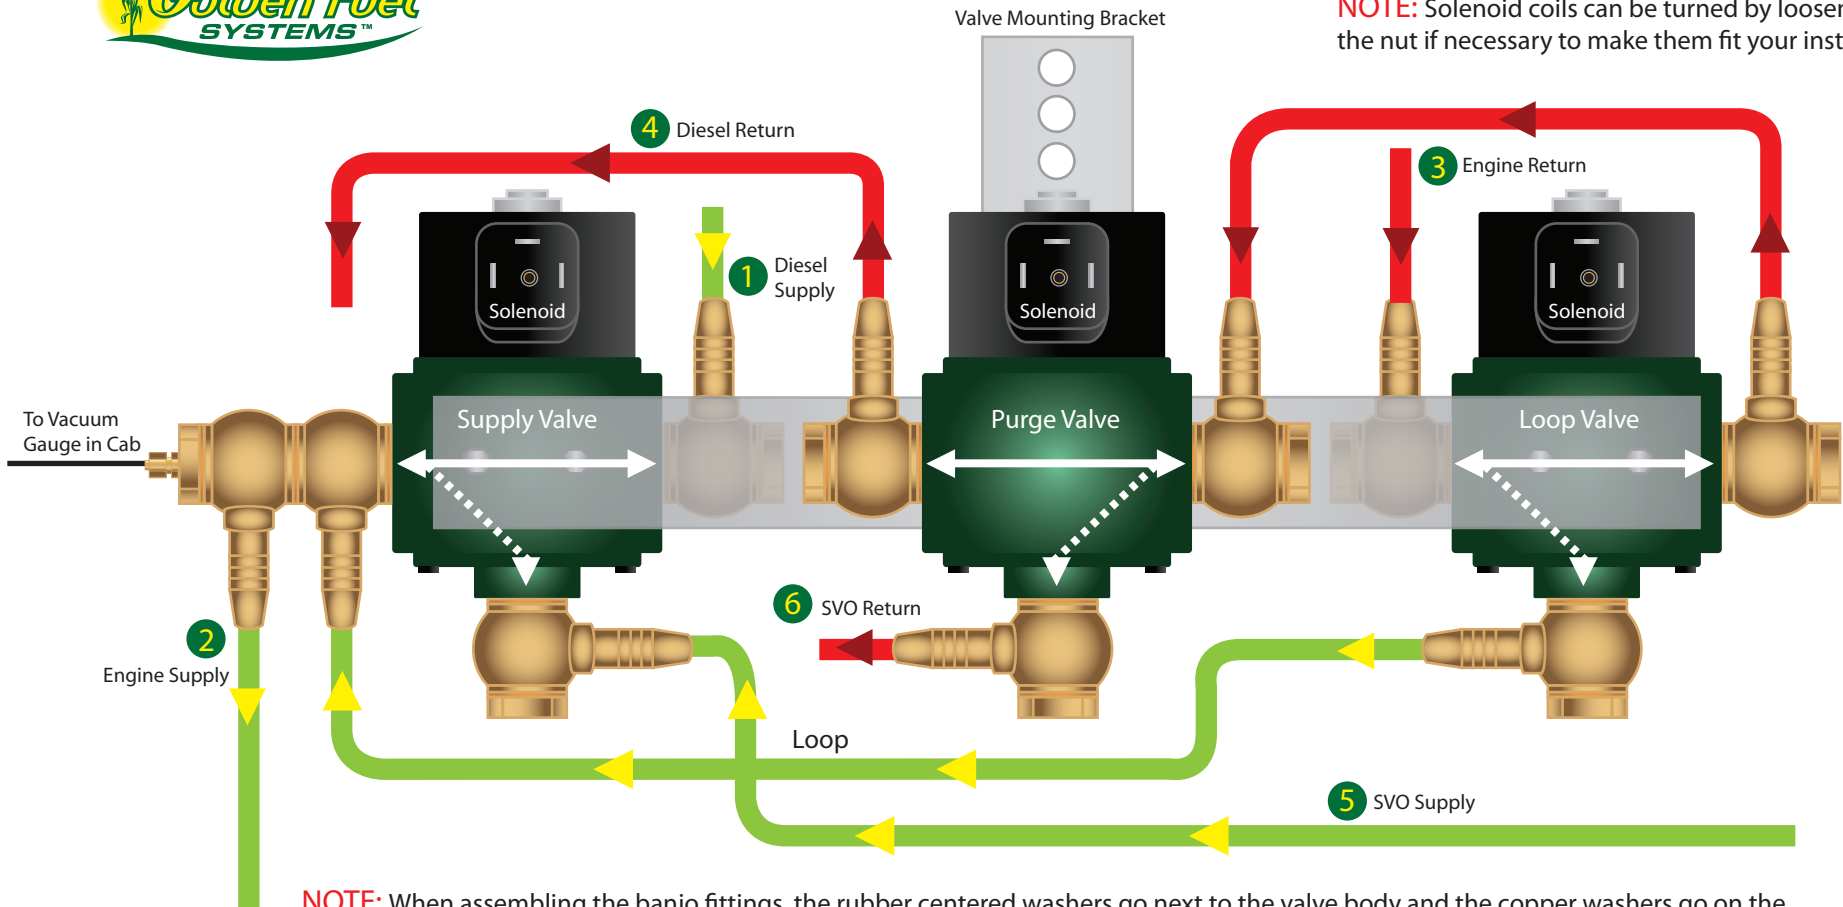

NOTE: When assembling the banjo fittings, the rubber centered washers go next to the valve body and the copper washers go on the end of the Banjo bolts.

NOTE: All three valves will fit on the bracket. It's critical that you note the shading on the diagram. It's transparency denotes which side of the bracket the valve is on.

Plumbing Key		Valve Key	
	= Supply/Direction of Flow		= Energized Position
	= Return/Direction of Flow		= Default Position
	= Supply From Diesel Tank		
	= Engine Supply		
	= Engine Return		
	= Return To Diesel Tank		
	= Supply From SVO Tank		
	= Return From SVO Tank		